
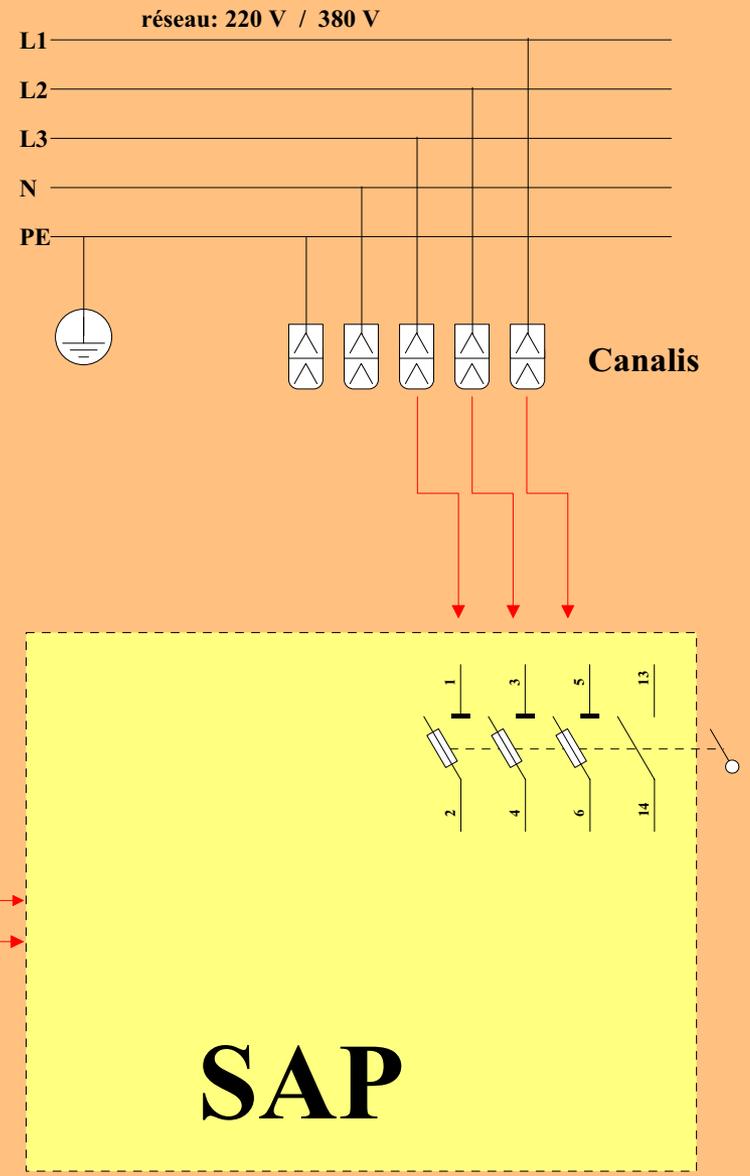




Consignation électrique

The image features the French phrase "Consignation électrique" in a bold, 3D, yellow-green font. The text is arranged in a curve that starts from the top left and extends towards the bottom right. The background is a dark gray grid of lines that converge towards a central point at the top, creating a perspective effect. A bright white light source is positioned at this convergence point, casting a strong glow and illuminating the text below it.




**Un Système Automatisé de Production
peut être alimenté en énergie
de plusieurs endroits**

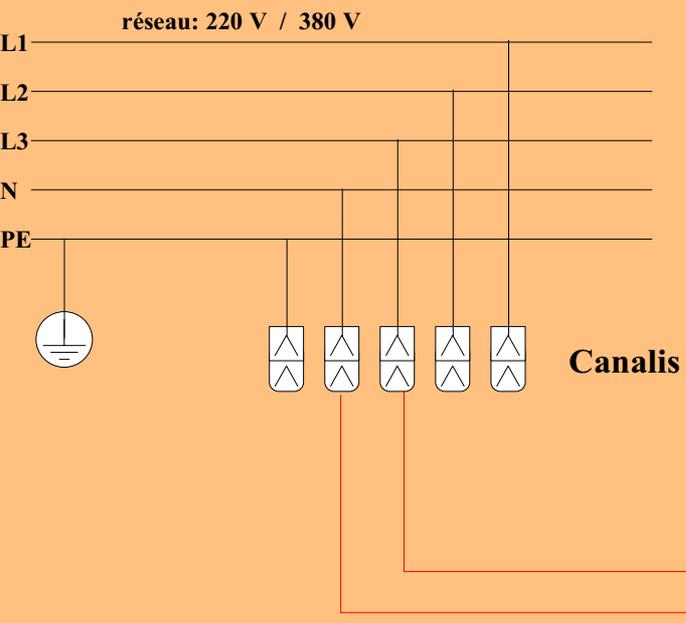

**Mettre une barrière
autour de la zone**


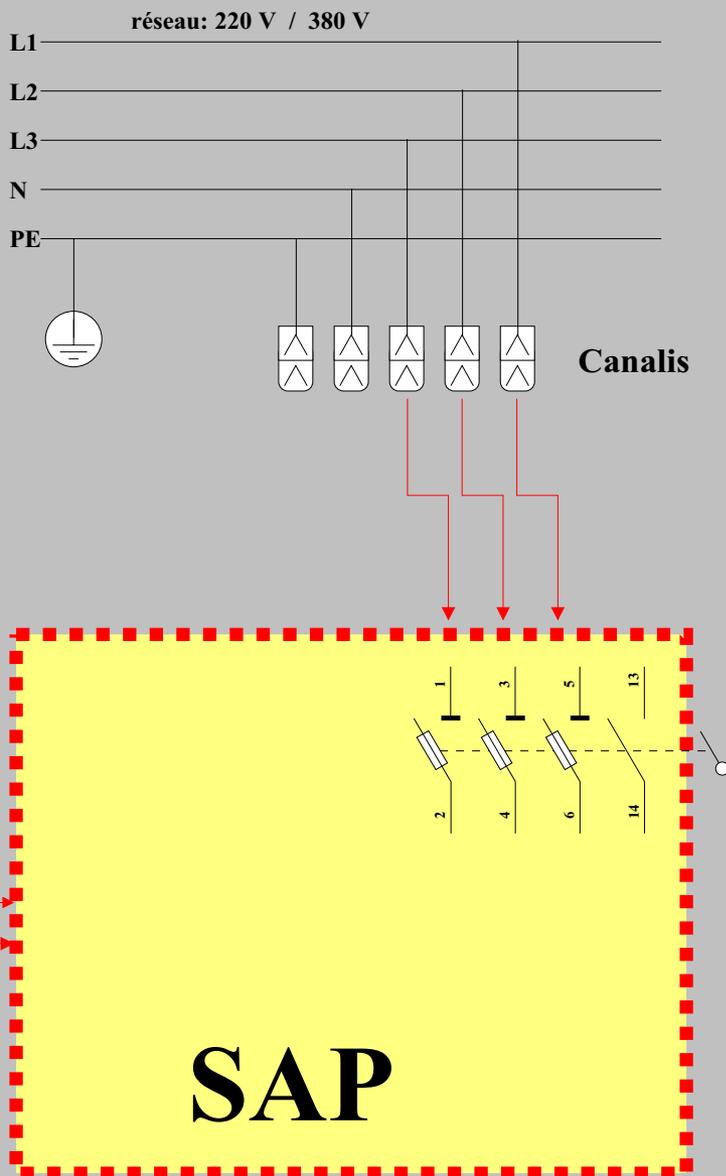
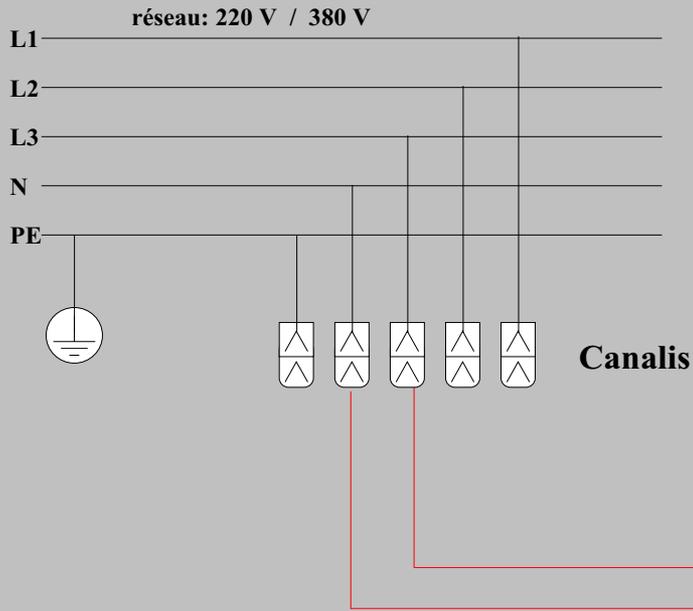


Informer: mettre des pancartes

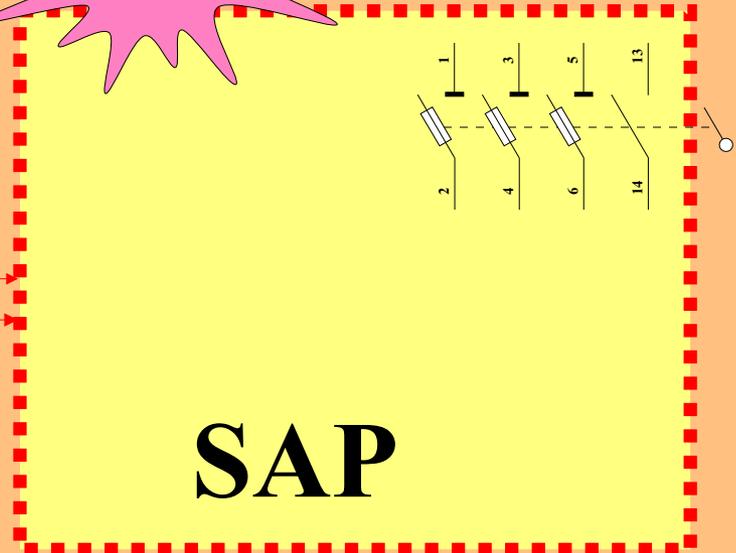
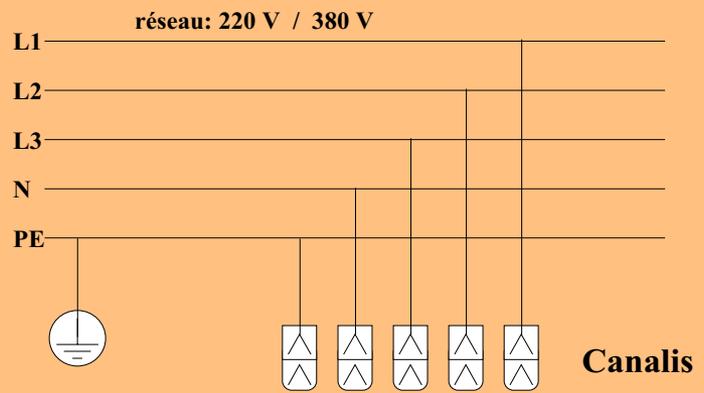
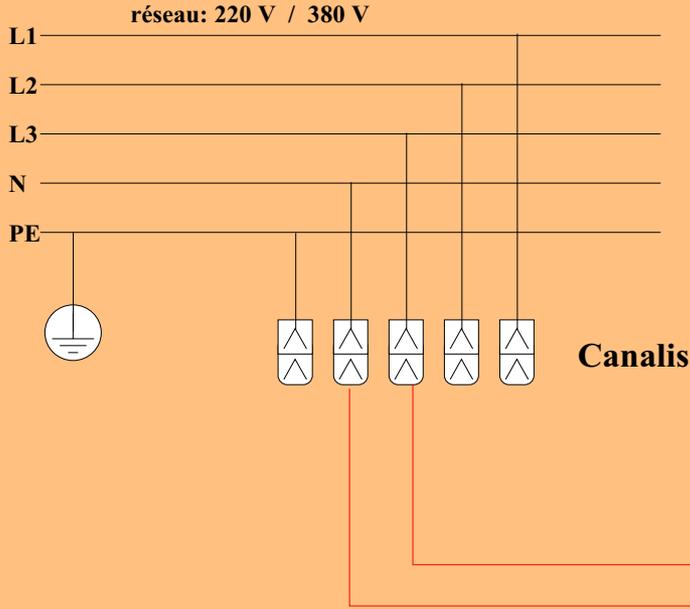


Il faut donc consigner au plus près de l'intervention



Séparation des énergies

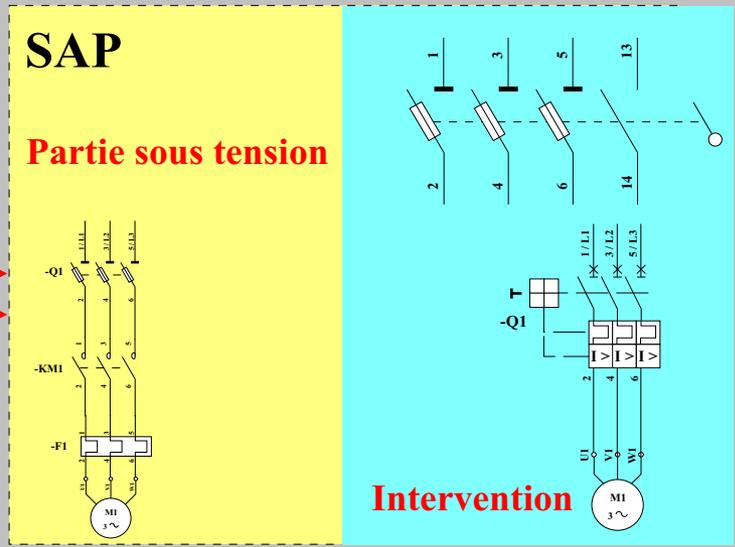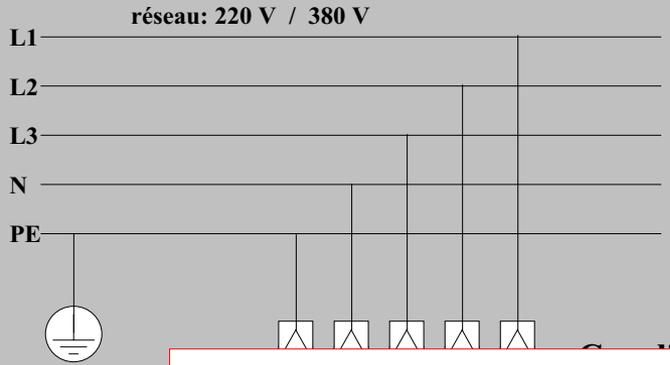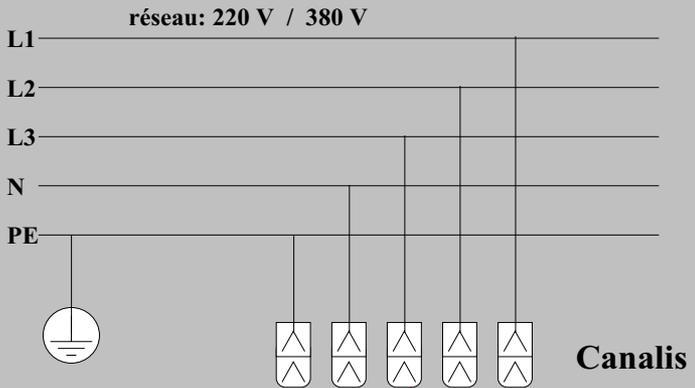

**vérifier la séparation
la partie concernée par l'intervention
ne doit pas être sous tension**

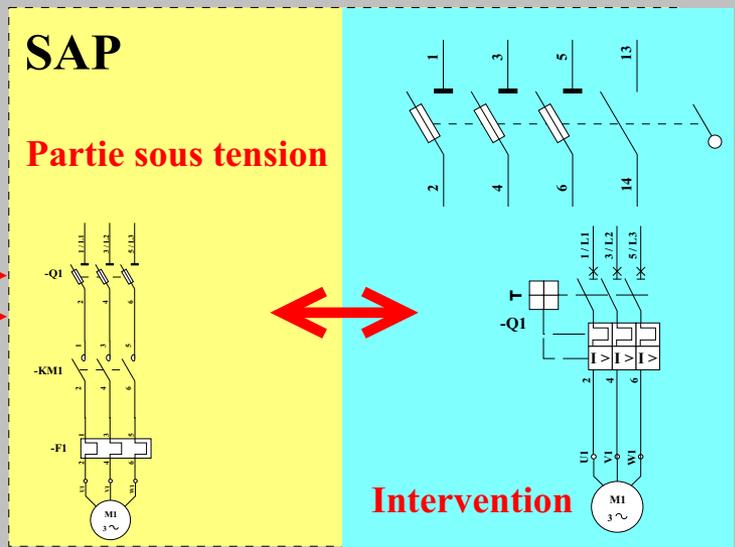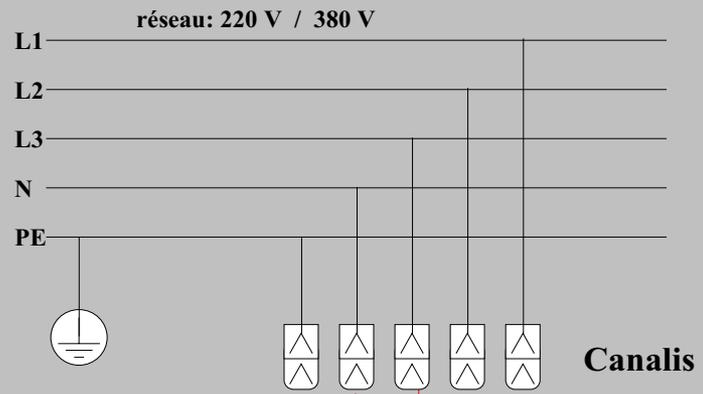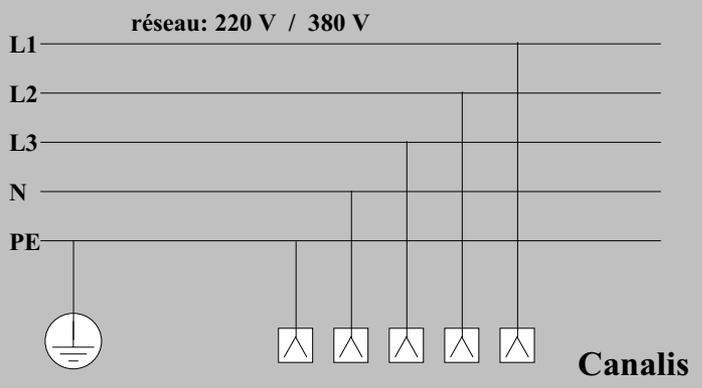


Condamner Mettre le ou les cadenas

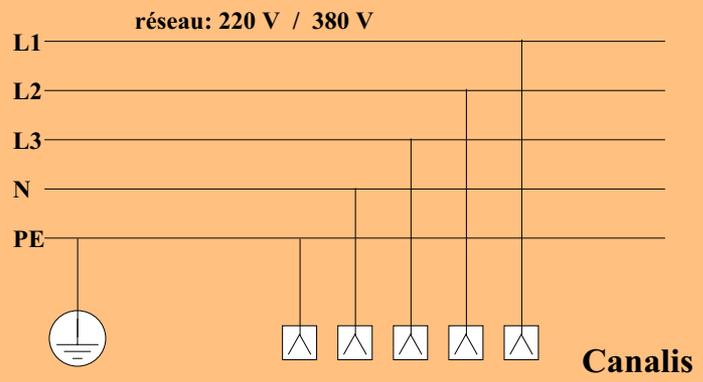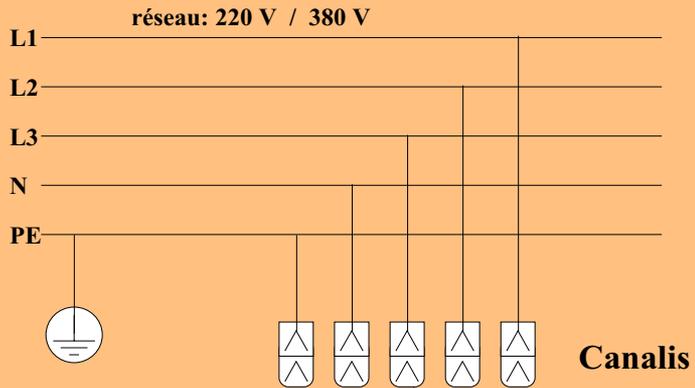


SAP

Partie sous tension


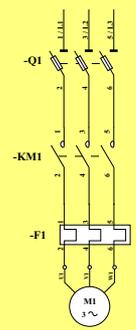


2- Cadenas



Intervention

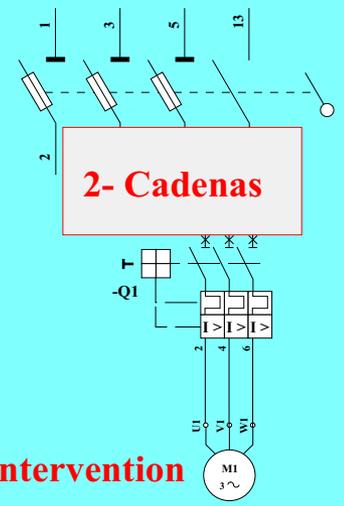




Ne pas laisser les fusibles à proximité

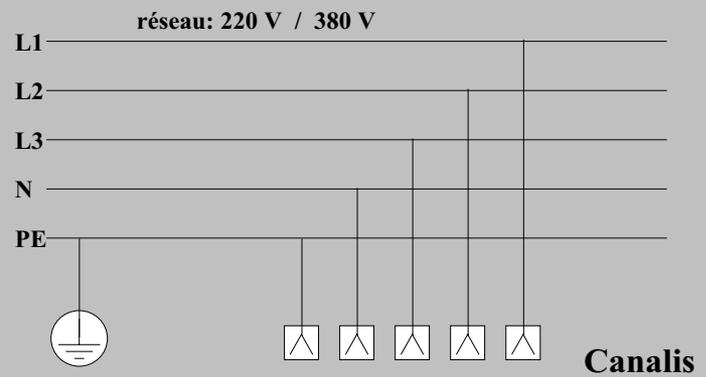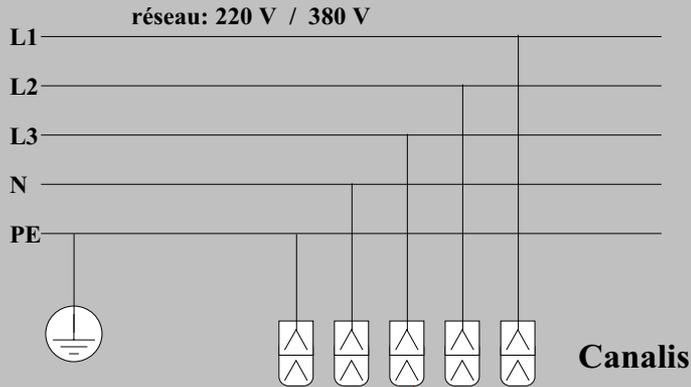

3- fusibles dans la poche

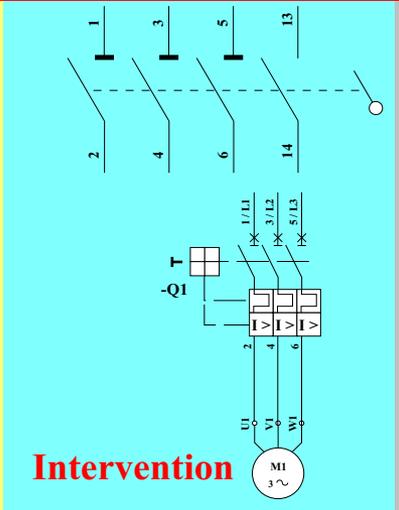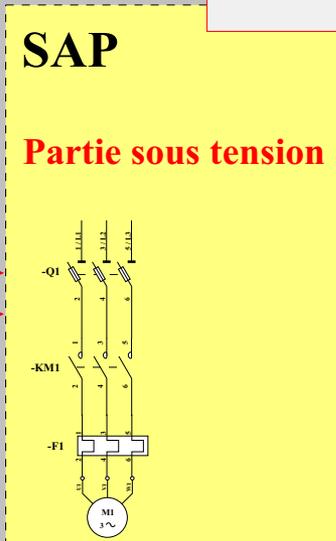

Mettre à la terre

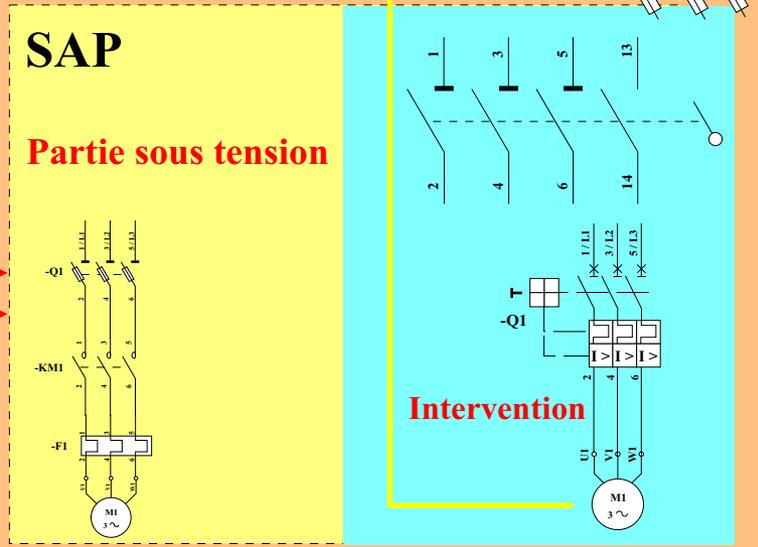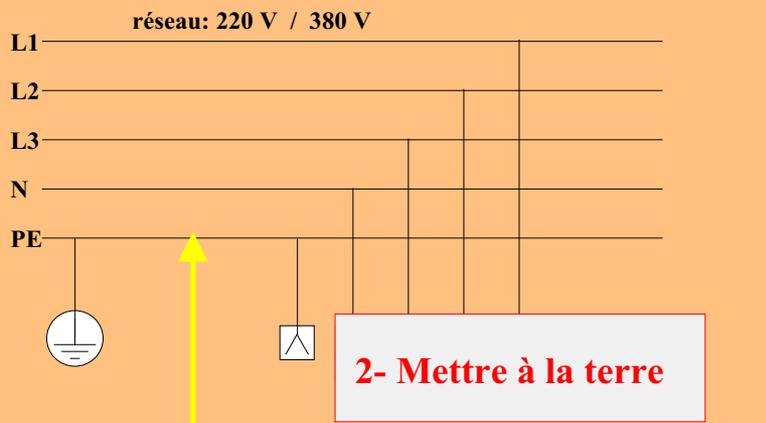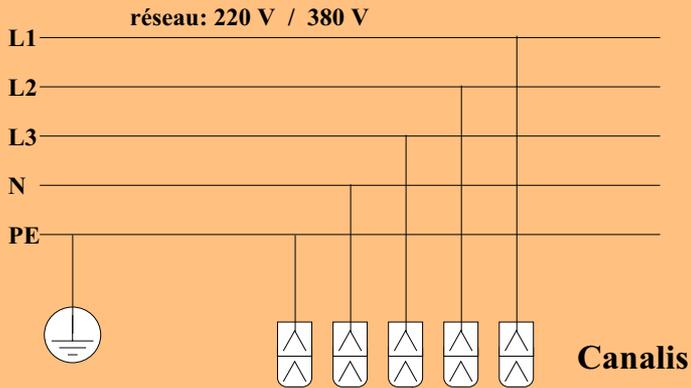



FIN